

CATEGORY

9

RY2103 REVOLUTION


RY2114 EVIDENCE

FEATURES AND SPECIFICATIONS

1. Standard display mode :
Hour, Minutes, Seconds, Month, Date, Day of the week
2. Function :
 - * Dual Alarm function with buzzer signal output
 - * Chronograph function with lap operation
3. Accuracy at normal temperature (25°C) :
±30 seconds a month
4. Normal operation temperature range :
10°C to 40°C
5. Battery :
CR2016 for Digital and UC377 for Analog

REGULAR DISPLAY AND BUTTON OPERATION

RY2103 & RY2114

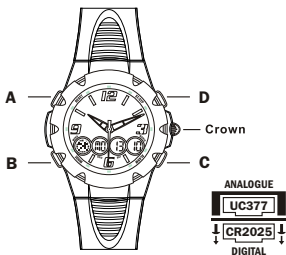

BUTTON OPERATION:

A: SET B: MODE
C: ADJUST D: START/STOP



HOW TO CHANGE MODE DISPLAY

Press button B to change the mode

The mode will change in the following sequence:

NORMAL TIME MODE



CHRONOGRAPH MODE



ALARM MODE



HOW TO SET NORMAL TIME

1. In the Normal Time mode, press and hold the A button until the Seconds start to flash.
2. While the seconds digits are flashing press C or D to reset the seconds to 00.
3. Press the B button to advance to the next setting sequence.
4. Press the D button to increase the selected number, press C to decrease the number. Holding down C or D will change the selection at high speed.
5. Repeat steps 3 and 4, the setting sequence is:



6. Press the A button to exit the Normal Time setting mode.

HOW TO USE THE CHRONOGRAPH

A. LAP MODE


*In the Chronograph mode, press the D button to start and stop the chronograph

*Press the A button to reset the chronograph.



B. SPLIT TIME

1. In the Chronograph mode, press the D button to start the chronograph.
2. Press the A button to display the split time, the chronograph timing continues internally.
3. Press the A button again to clear the split time and continue the time measurement.
4. Repeat steps 2 and 3, you can measure multiple split times.
5. Press the D button to stop the chronograph.

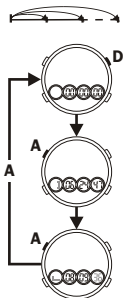

HOW TO USE THE ALARM

1. In the Alarm mode, press the C button to switch between the first and second alarm.
2. Operation and setting of the second alarm is the same as the first alarm.
3. In the alarm mode press the D button to turn ON or OFF the alarm. If the alarm is ON "on" will appear on the display.



HOW TO SET THE ALARM

1. In the Alarm mode, press button A, the Hours will start to flash.
2. Press the D button to increase the Hours, press C to decrease the Hours. Press and hold either button to change the number at a high speed.
3. Press the B button to advance to set the Minutes.
4. Press the D button to increase the Minutes, press C to decrease the Minutes. Press and hold either button to change the number at a high speed.
5. Press the A button to exit the Alarm mode.
6. The alarm will sound at the preset time each day for about 60 seconds. Press any button to stop the alarm.

