

CATEGORY**1****RY2009 HIGH ENERGY****RY2010 HIGH GEAR****RY2047 CROSS TERRA****RY2058 VIBE****RY2070 TECHIE****RY2071 EXPRESS****RY2073 ZONE****RY2087 ATTITUDE****RY2088 ESCAPE****RY2095 JUICY****RY2096 CRUSH****RY2097 SMOOTHIE****RY2098 INSTINCT****RY2100 ABSTRACT****RY2106 HYPE****RY2107 PLATEAU****RY2111 FAME****RY2120 ZAPP****RY2122 FIESTA****RY2123 CREAMSICLE**

FEATURES AND SPECIFICATIONS

- 1.** Standard display mode: Hour, Minutes, Seconds, and Day of week.
- 2.** Button operation:
 - * Month, Date AM/PM and Electro-Luminescent light.
 - * Alarm function with buzzer signal output.
 - * Chronograph function with lap operation.
 - * Hourly chime signal.
 - * 12/24 hour format switch option.
- 3.** Accuracy at normal temperature (25°C):
±30 seconds a month.
- 4.** Normal operating temperature range:
10°C~40°C
- 5.** Battery: model CR1220/CR1620 (RY2009, RY2010, RY2058, RY2070, RY2071, RY2087, RY2088, RY2095, RY2096, RY2097, RY2098, RY2106, RY2120, RY2122 & RY2123), CR2016 (RY2073, RY2100, RY2107 & RY2111), CR2025 (RY2047).

REGULAR DISPLAY AND BUTTON OPERATION

RY2009 RY2088



RY2010



BUTTON OPERATION:

A: LIGHT **B:** MODE **C:** DATE, START/STOP
D: ALARM/RESET/ADJUST

RY2047



RY2069



RY2058




BUTTON OPERATION:

A: LIGHT **B:** MODE **C:** DATE, START/STOP
D: ALARM/RESET/ADJUST


RY2070 RY2071



RY2072

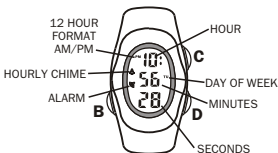


RY2073

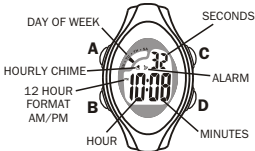


BUTTON OPERATION:

**A: LIGHT B: MODE C: DATE, START/STOP
D: ALARM/RESET/ADJUST**


RY2078 RY2089

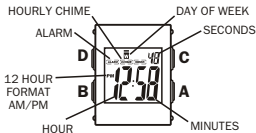

RY2087

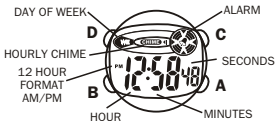

RY2095

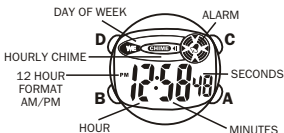


BUTTON OPERATION:

A: LIGHT **B:** MODE **C:** DATE, START/STOP
D: ALARM/RESET/ADJUST


RY2096



RY2097

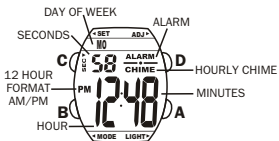


RY2098

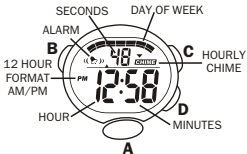


BUTTON OPERATION:

A: LIGHT **B:** MODE **C:** DATE, START/STOP
D: ALARM/RESET/ADJUST

RY2100

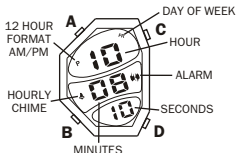

RY2106 & RY2107

 


RY2111



BUTTON OPERATION:

**A: LIGHT B: MODE C: DATE, START/STOP
D: ALARM/RESET/ADJUST**


RY2120

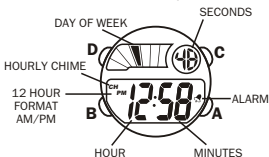

RY2122



RY2123

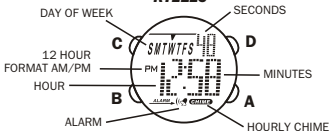

BUTTON OPERATION:

**A: LIGHT B: MODE C: DATE, START/STOP
D: ALARM/RESET/ADJUST**


12/24 HOUR FORMAT DISPLAY

Press D and hold to display alarm time mode:

- * press B simultaneously to select 12 or 24 hour format.
- * 12 hour format: 'A'=AM, 'P'=PM. In case of 24 hour format, No 'A' or 'P' mark appears.

HOW TO DISPLAY MONTH, DATE


- * Month/Date can be displayed by pressing C.
- * While Month/Date is displayed, press D simultaneously and then the "Month/Date" or "Date/Month" is displayed alternatively. Release to return to normal time display.

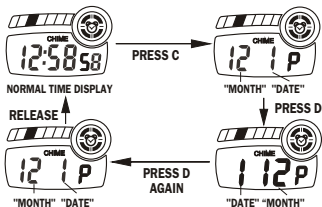

HOW TO ADJUST NORMAL TIME

Press button B and hold for two seconds to display alarm time setting. Press B again to normal time display.

1. The symbol "TUE" flag starts flashing and the seconds digit flashes simultaneously. To set seconds to "00" press D (if seconds is less than or equal to 29, the minute does not change, if seconds is greater than or equal to 30 the minute advances by one).
2. Each press of C will shift the flashing digits in the following order: seconds, minutes, hours, month, date and day of week. Press D to advance by one unit, press D and hold to advance rapidly.
3. After all the adjustments are completed, press B to return to Normal time display.

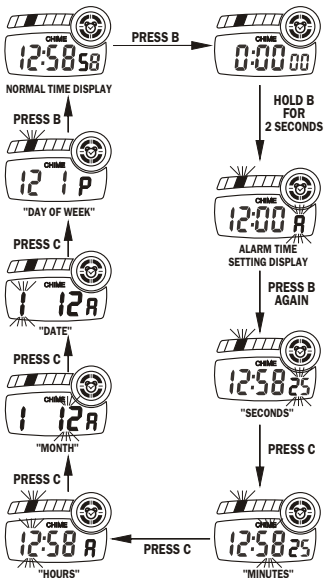

HOW TO USE THE CHRONOGRAPH

1. SIMPLE COUNTING

Press B to come to chronograph mode.

Press C to start counting.

Press C to stop counting.

Press D to reset to "00"

2. LAP COUNTING

*In chronograph mode:

Press C to start counting.

Press D to read the first lap count,

While the chronograph is still counting

(indicated by the lap mark "THU" flag flashing)

*Press D to continue counting,

Press D again to read the second lap count,

While the chronograph is still counting

(indicated by the lap mark "THU" flag flashing)

*Repeating the above operations will split time.

*Press C, the symbol "FRI" flag will flash.

Press D, the final lap count will be displayed.

Press D again and the chronograph is reset to "00".

*When counting is less than 40 minutes, the chronometer displays minutes / seconds / 1/100 seconds.

 
When counting is greater than 40 minutes, the chronometer displays hours / minutes / seconds.

Press B to return to normal time display.


NOTE: Be sure to record lap times as the lap recall feature is not available.

HOW TO USE ELECTRO-LUMINESCENT FUNCTION

Press "button A" at any moment of setting to use electro-luminescent function.



ALARM AND CHIME DISPLAY

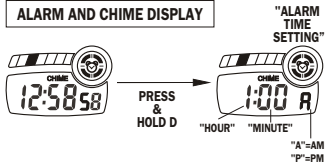

1. Press D and hold to display alarm time and buzzer and release to return to normal time display.
2. Pressing and holding D, the alarm "🕒" or "🔔" chime symbols can be switched off and on by pressing C.

HOW TO SET ALARM TIME

1. Press B and hold for two seconds to display alarm time setting mode (hour and symbol "MON" flag start flashing)
Alarm hours : press D to advance by one unit ; press D and hold to advance rapidly.
Alarm minutes : Press C and minutes start flashing, press D to advance by one unit, press D and hold to advance rapidly.
2. Press B to return to normal time display.
*Alarm/chime functions are operative only if the Corresponding symbols are on display.

